


How to Assemble a Base Cabinet

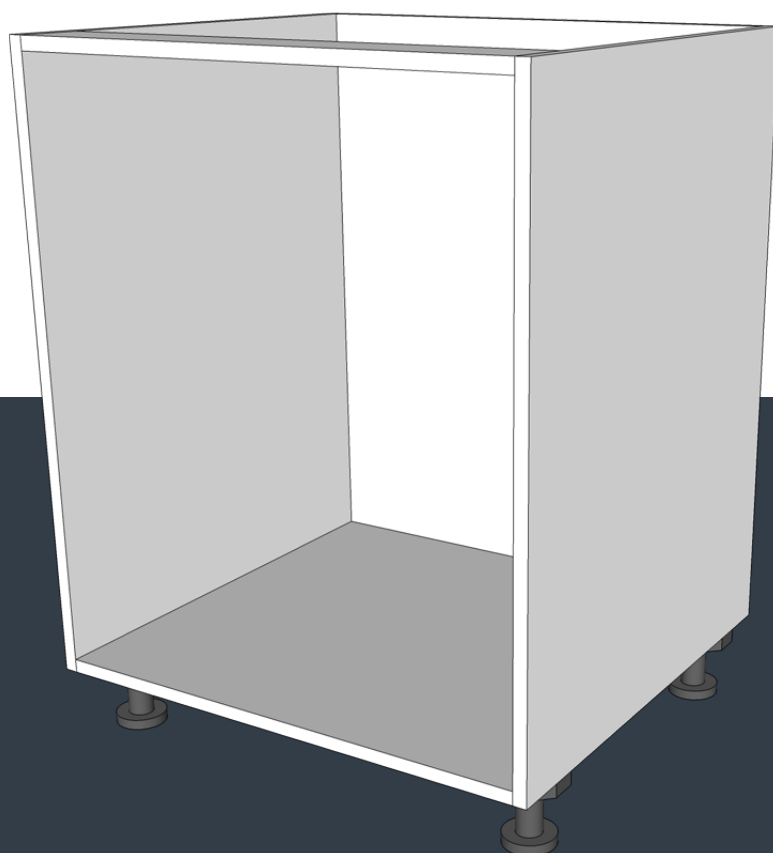

Feeling lost?

Watch the How-To
video here:



info@goflatpacks.com.au
www.goflatpacks.com.au

goflatpacks


Tools Required:



Glue Bottle



Cordless Drill

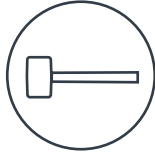


Mallet

Step 1:

Collect all of the required parts for your goFlatpacks product. You will need:

1. Back Panel
2. Left Panel
3. Right Panel
4. Top Rail
5. Bottom Panel
6. Wood Screws
7. Adjustable Feet (if supplied)

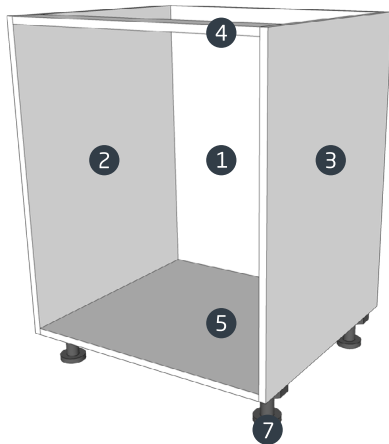

Step 2:

Select your **Bottom Panel** with the adjustable feet holes facing up. Take one of the base plates of your **Adjustable Feet** and place it in the pre-drilled holes.



Step 3:

Using a mallet, hammer in the 4 posts of the adjustable feet into the **Bottom Panel**.

Make special note to place the 45 degree edges facing towards the side of the bottom panel. This helps with support when your side panels run past the edge of your bottom panel.



Step 4:

Select your **Back Panel**. If supplied, gently tap in the cabinet connectors into the pre-drilled holes using a mallet.



Step 5:

Starting with the **Bottom Panel** right side, glue along the bottom edge where you will be screwing.



Step 6:

Next, lift both the **Bottom Panel** and **Right Panel** upwards to create an L shape.

Check all your edges are square before starting to screw the panels together.



Step 7:

Move your L shape carcass to the side and pick up your **Left Panel**. Now repeat the process of gluing and screwing the same as for the **Right Panel**.



Step 8:

Flip your cabinet carcass over, leaving the bare edges of the **Side** and **Bottom Panels** facing up. Apply your glue along the edging, and then place the **Back Panel** over the top.




Step 9:

Square your **Back Panel** off by screwing down one side of the back, then down the adjacent side.



Step 10:

Apply glue to each end of the **Top Rail** and place inside the top front of the cabinet, in line with the screw holes.

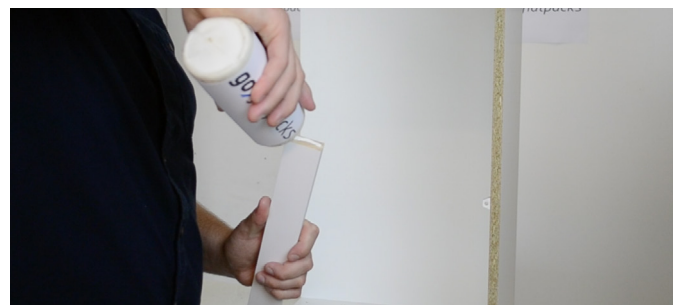

Step 11:

You will need to drill pilot holes into your **Top Rail** to avoid splitting the wood as the screw is inserted. Screw in your **Top Rail** from both sides to finish off.



Step 12:

Congratulations! You have finished assembling your goFlatpacks Base Cabinet carcass.

