


# How to Install Hinge Plates

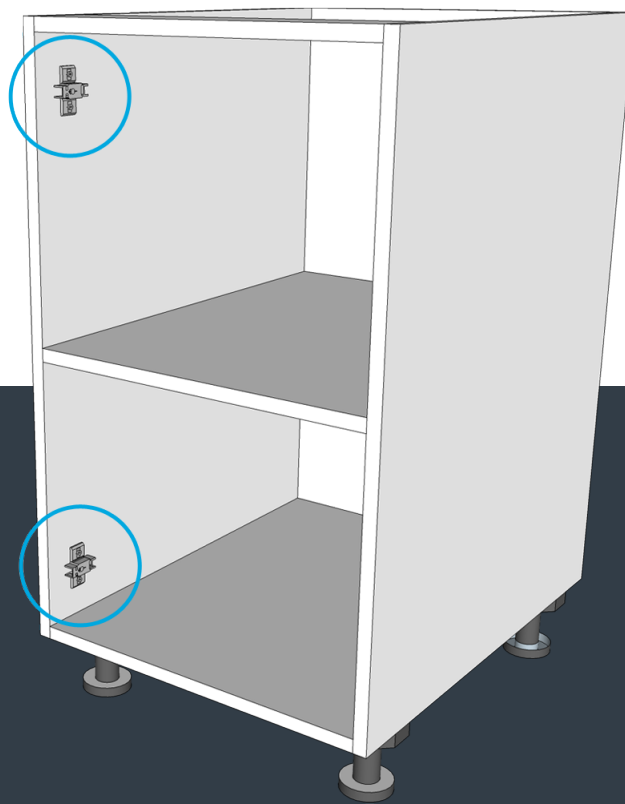

**Feeling lost?**

Watch the How-To  
video here:



## Tools Required:



Cordless Drill

### Step 1:

Collect all of the required parts for your goFlatpacks product. You will need:

1. Hinge Plates



### Step 2:

To ensure you install the **Hinge Plate** the correct way, look for the small arrow imprinted on the face of the **Hinge Plate**. The arrow will be pointing towards the front of the cabinet.




### Step 3:

Press the **Hinge Plate** into the two vertically aligned holes along the inside of the cabinet carcass.




### Step 4:

Using your cordless drill, gently screw in the first screw part of the way, then the additional screw all the way in so it is tight. Finish off by tightening the first screw the whole way.

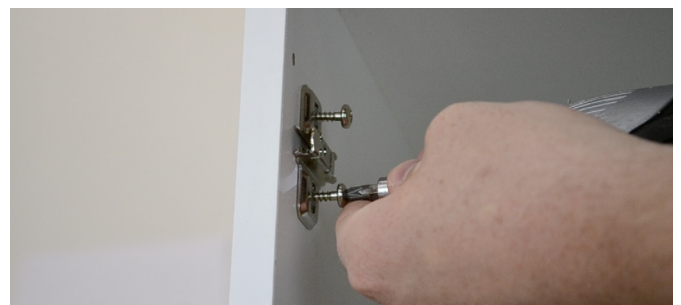

## Step 5:

Congratulations! You have successfully installed your goFlatpacks Hinge Plate.

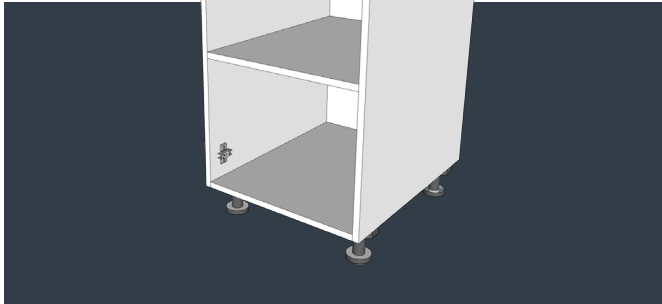

---

\*goFlatpacks recommends installing your cabinets before affixing your doors onto their hinge plates.