


How to Assemble a Drawer Box

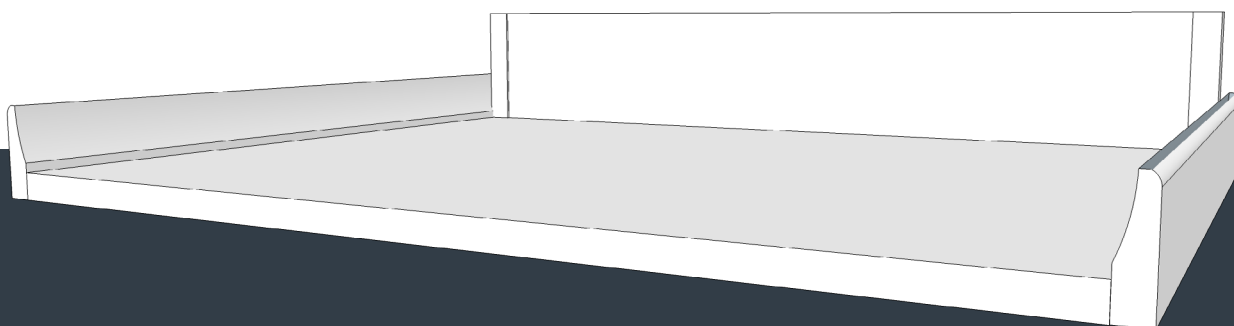

Feeling lost?

Watch the How-To
video here:



info@goflatpacks.com.au
www.goflatpacks.com.au

goflatpacks

Tools Required:




Cordless Drill

Step 1:

Collect all of the required parts for your goFlatpacks product.
You will need:

1. Drawer Bottom Panel
2. Left Drawer Side
3. Right Drawer Side
4. Drawer Back Panel
5. Fixing Brackets
6. Wood Screws
7. Euro Screws

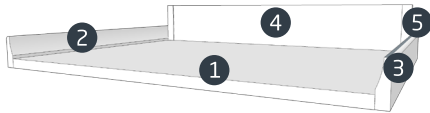

Step 2:

Lay your **Drawer Bottom** so that the pre-drilled holes along the edges are facing upwards. These holes line up with the holes on the bottom of your **Drawer Sides**.



Step 3:

Align the **Drawer Sides** with the pre-drilled holes and affix using the supplied **Euro Screws**.

Be careful not to overtighten your screws.



Step 4:

Flip the Drawer Box over and with the notches on the **Fixing Bracket** facing towards the outside of the Drawer Box, clip the brackets onto the Drawer Sides.




Step 5:

Pick up your **Drawer Back Panel** and slide into the **Fixing Brackets** so that the bottom edge of the Drawer Back sits flush with the Drawer Bottom.



Step 6:

Screw in the **Euro Screws** on each end of the **Drawer Back Panel** to secure in place.

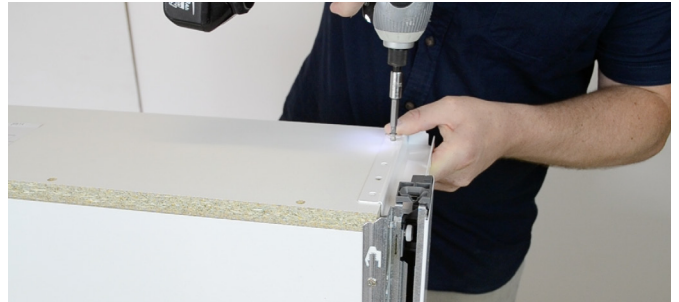

Step 7:

Finish by affixing the bottom of the **Drawer Back Panel** with **Wood Screws**.



Step 8:

Congratulations! You have assembled your goFlatpacks Drawer Box and are now ready to install the drawer face.

