


How to Assemble a Tall Cabinet

2-Part Tall Cabinet assembly shown

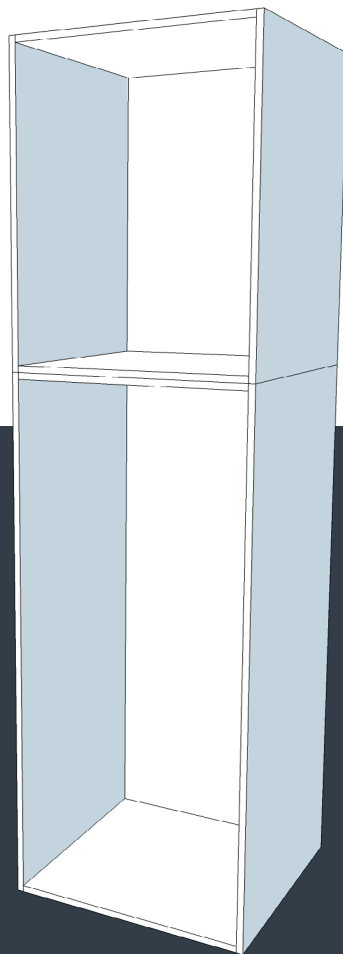

Feeling lost?

Watch the How-To
video here:



info@goflatpacks.com.au
www.goflatpacks.com.au

goflatpacks

Tools Required:



Glue Bottle




Cordless Drill

Step 1:


Collect all of the required parts for your goFlatpacks product. You will need:

- | | |
|------------------------|-------------------------|
| 1. Bottom Panel (Tall) | 7. Bottom Panel (Upper) |
| 2. Back Panel (Tall) | 8. Back Panel (Upper) |
| 3. Top Panel (Tall) | 9. Top Panel (Upper) |
| 4. Right Panel (Tall) | 10. Right Panel (Upper) |
| 5. Left Panel (Tall) | 11. Left Panel (Upper) |
| 6. Wood Screws | |

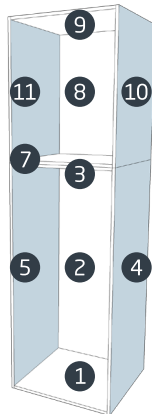


Step 2:

Before you start assembly, collect all of the required parts for the **Lower/Tall Section** of the 2-Part Tall Cabinet.

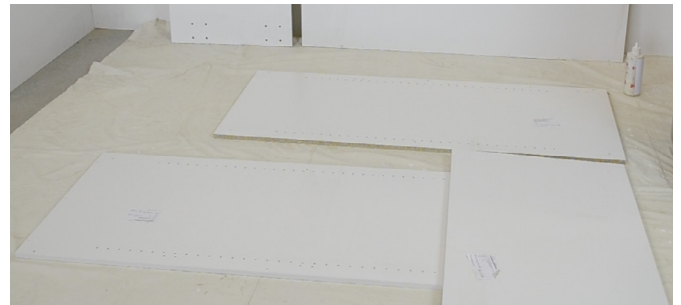

Step 3:

Glue along the top inside edge of the **Right Panel**, lift up and place against the **Top Panel**. Square the panels and ensure the edges are flush before inserting the **Wood Screws**.

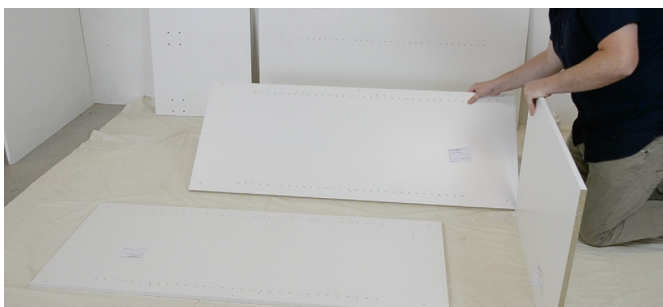

Step 4:

Once complete, repeat the process again on the **Left Panel**.



Step 5:

Next, glue along the edges of your **Bottom Panel** and place into position in the base of the cabinet.

Ensuring the adjustable feet holes are facing towards the outside of the cabinet.



Step 6:


Flip your cabinet over. Now you will be attaching the **Back Panel**.

Glue along the back edging of the cabinet carcass and with the help of another person, lift the **Back Panel** into position.



Step 7:

Screw along one side of the **Back Panel**, then along the adjacent side to square off the panel. The lower part of your 2-Part Tall Cabinet is now complete.

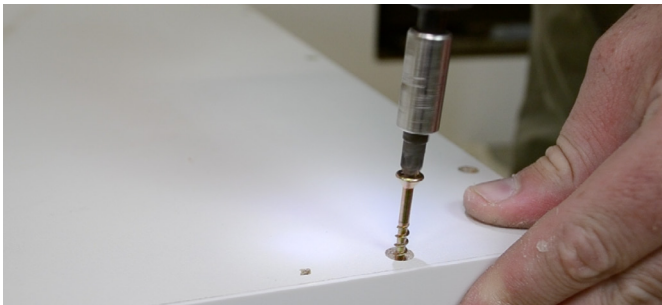

Step 8:

For the **Upper Section**, simply repeat the same process.



Step 9:

With the help of another person, lift the **Upper Section** onto the **Lower/Tall Section** and your 2-Part Tall Cabinet is ready for installation.



Step 10:

Congratulations! Your goFlatpacks 2-Part Tall Cabinet carcass is now complete.

