


How to Assemble an Appliance Cabinet

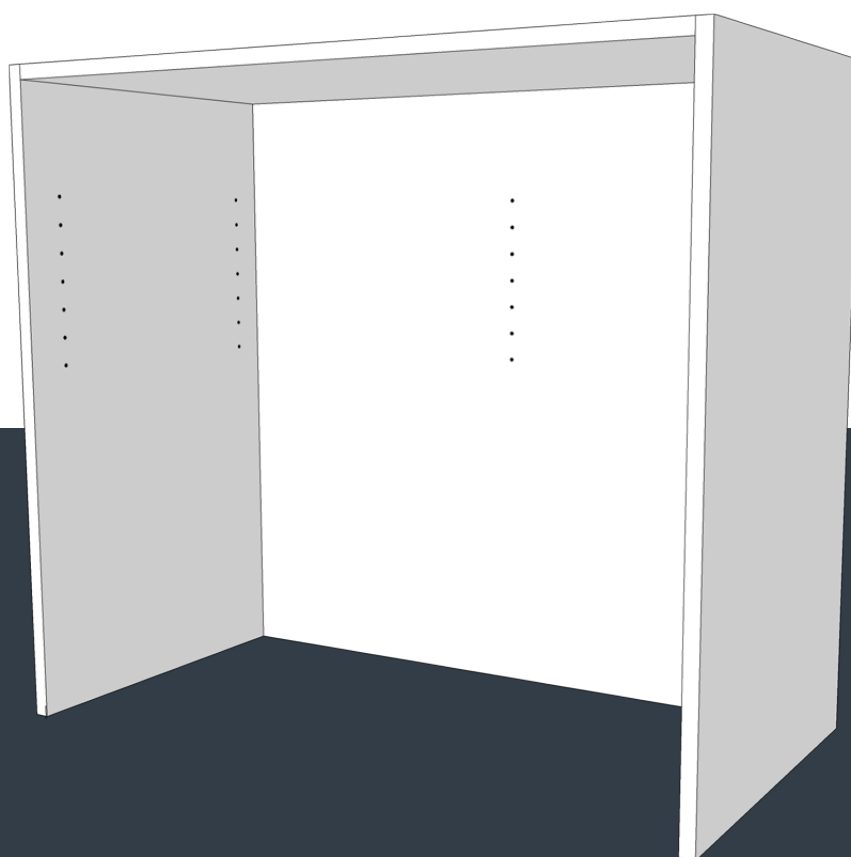

Feeling lost?

Watch the How-To
video here:



Tools Required:



Glue Bottle




Cordless Drill

Step 1:

Collect all of the required parts for your goFlatpacks product. You will need:

1. Top Panel
2. Left Panel
3. Right Panel
4. Back Panel
5. Wood Screws

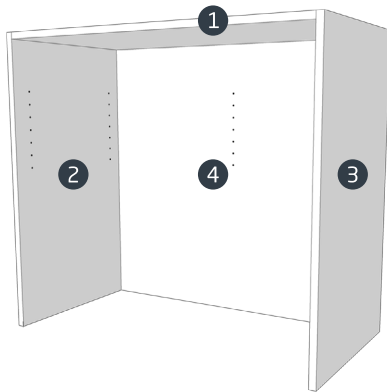

Step 2:

Start by gluing the top inside edge of the **Right Panel**.




Step 3:

Lift up your **Top Panel** and once in place, square off with your **Side Panel** and ensure edges are flush before screwing your panels together with **Wood Screws**.



Step 4:

Repeat the same process for the **Left Panel**.

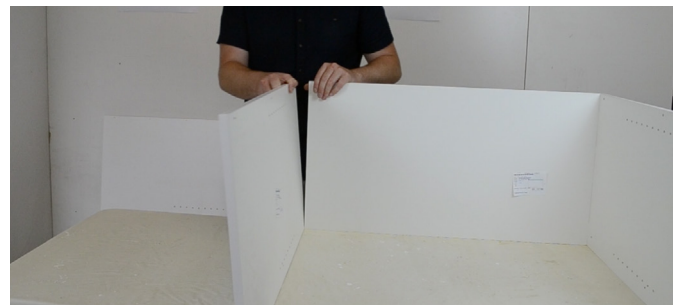

Step 5:

Flip your appliance carcass over. Glue along the edge of the back of the carcass and place the **Back Panel** on top. Square up edges, wipe away any excess glue and screw together.



Step 6:

Start by screwing along one side of the **Back Panel**, then along the adjacent side to square your cabinet carcass. Finish by affixing the remaining screws.



Step 7:

Congratulations! Your goFlatpacks **Appliance Cabinet** carcass is now complete.

