


How to Install a Bi-Fold Door

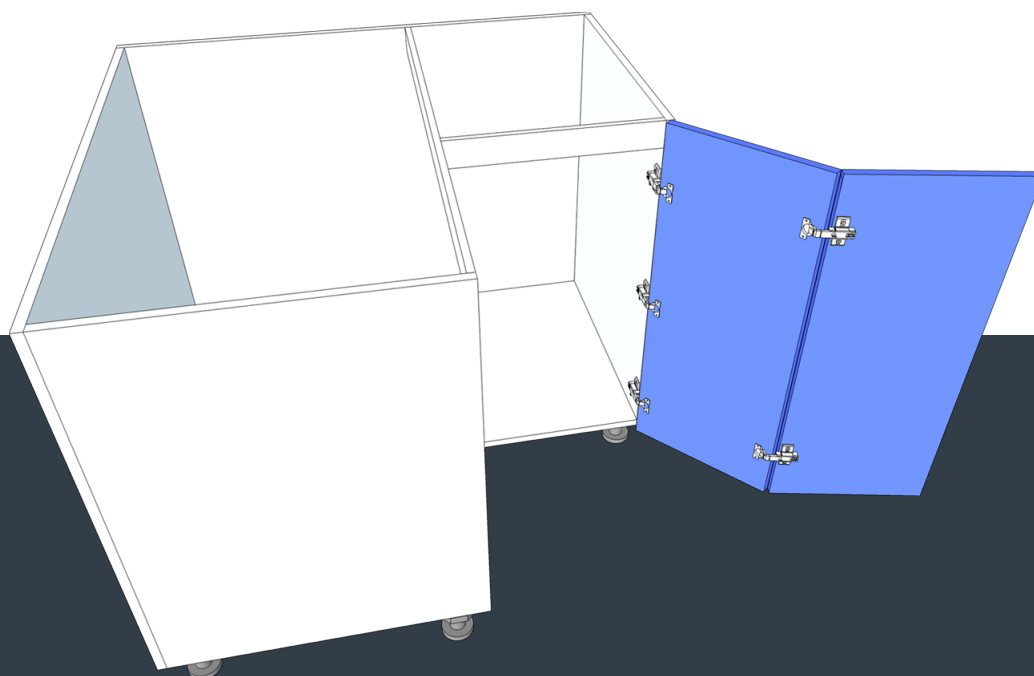

Feeling lost?

Watch the How-To
video here:



info@goflatpacks.com.au
www.goflatpacks.com.au

goflatpacks

Tools Required:




Cordless Drill

Step 1:

Collect all of the required parts for your goFlatpacks product. You will need:


1. First Door Panel
2. Second Door Panel
3. Installed Hinge Plates
4. Hinge Plates
5. Corner Cabinet Bi-Fold Hinge
6. 170°/180° Hinge

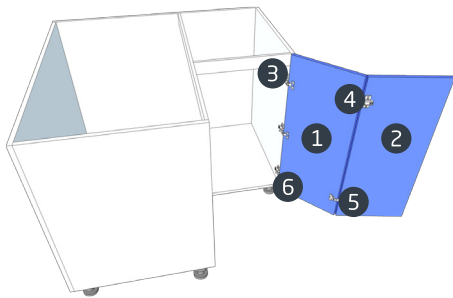

Step 2:

Your **First Door Panel** will contain cut-outs for your two types of hinges.

Please note, the cut-outs which go all the way to the edges of the panels are for the **Corner Cabinet Bi-Fold Hinges**.

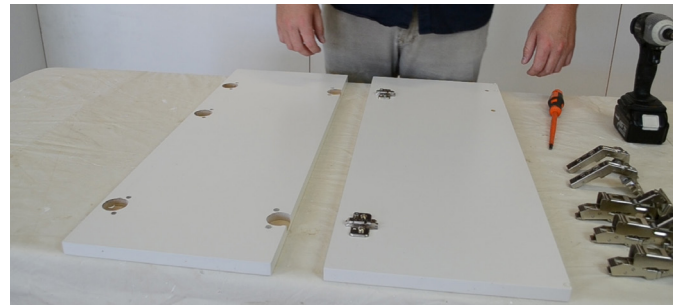

Step 3:

Place your **170°** or **180° Hinge** into the cut-outs provided.



Step 4:

Press firmly into place and flip down the boss cover cap to secure in place.

Repeat the process with the remaining hinges of this type.



Step 5:

Next you will be installing the **Corner Cabinet Bi-Fold Hinges**.



Step 6:


Place into the cut-out provided, press into place and then secure by tightening the screws.

Be careful not to over-tighten. Repeat with the remaining bi-fold hinges.



Step 7:

Take the door that has the hinges affixed and attach to the **Hinge Plates** on the inside of your cabinet carcass. Simply place the hinges in line with the **Hinge Plate** then press to clip on.

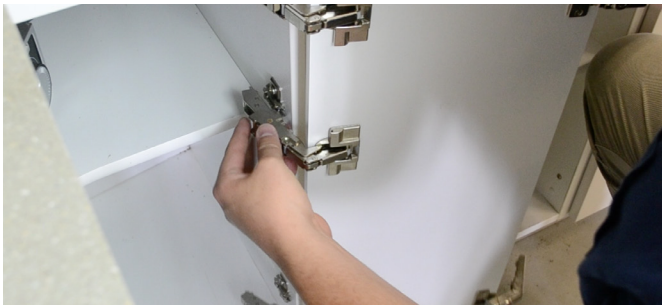

Step 8:

Open and close the door to ensure the hinges are working correctly.




Step 9:

Next, clip the **Hinge Plates** on the **Second Door Panel** onto the **Bi-Fold Hinges** installed on the **First Door Panel**. Simply place in line and clip into position.



Step 10:

Open and close your **Bi-Fold Door** a couple of times to check that it is working correctly.

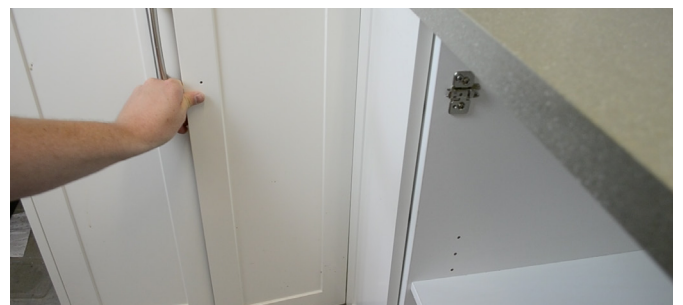

Step 11:

Congratulations! You have successfully installed your goFlatpacks Bi-Fold Door.

