


How to Install a Door

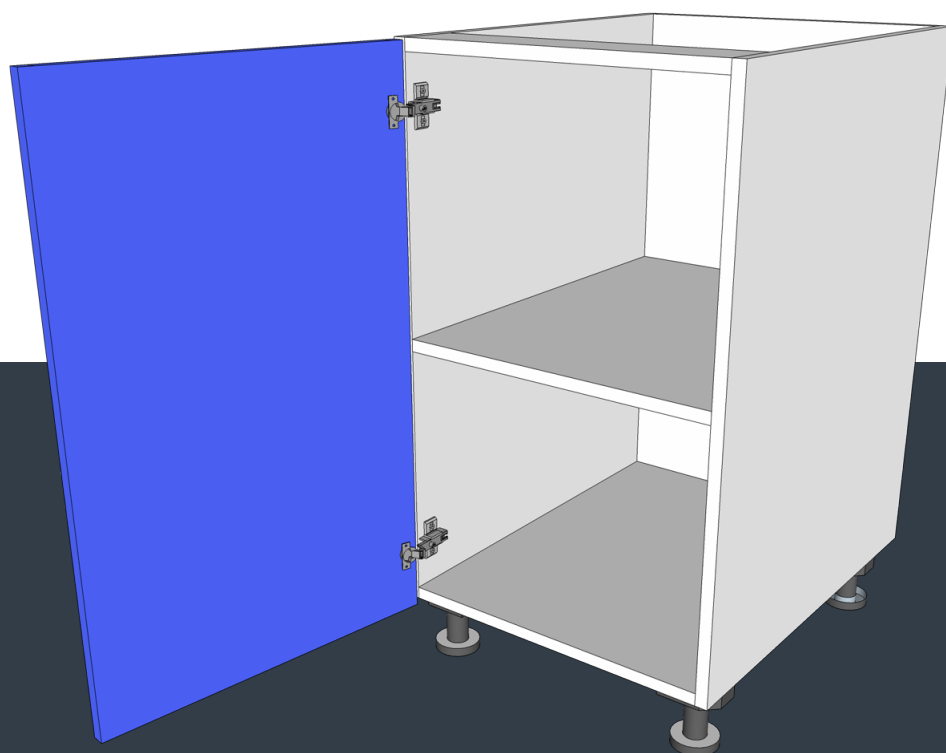

Feeling lost?

Watch the How-To
video here:



Tools Required:




Cordless Drill

Step 1:

Collect all of the required parts for your goFlatpacks product.
You will need:

1. Door Panel
2. Door Hinge
3. Installed Hinge Plates

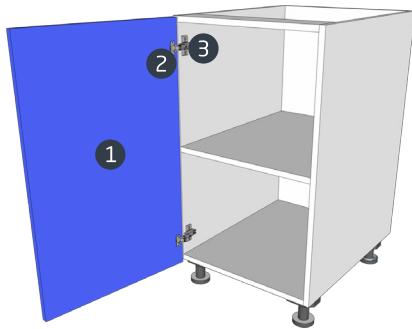

Step 2:

Place your **Door Hinges** in the holes provided and press firmly into place.



Step 3:

As we are using the Inserta model Door Hinges here, simply flick down the boss cover cap to lock the hinge into position.

You may need to screw the hinge into position if you are using a screw on model hinge.



Step 4:

Line up your **Door Hinges** with the **Installed Hinge Plates** positioned in your cabinet carcass and then press on the **Door Hinge** to clip into place.



Step 5:

Congratulations! You have successfully installed your goFlatpacks Cabinet Door.

