


# How to Assemble an Upper Cabinet

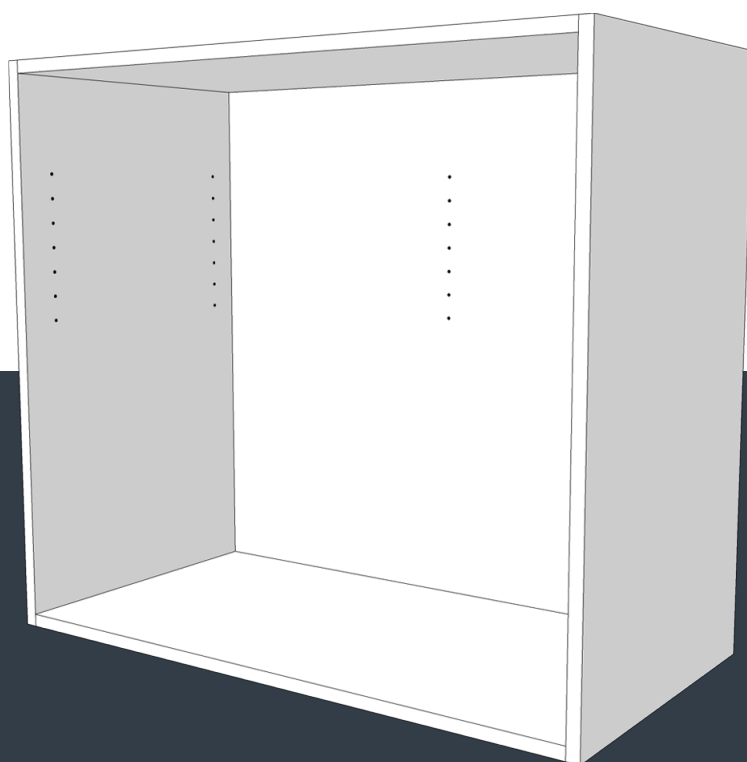

**Feeling lost?**

Watch the How-To  
video here:



## Tools Required:



Glue Bottle




Cordless Drill

## Step 1:

Collect all of the required parts for your goFlatpacks product. You will need:

1. Top Panel
2. Bottom Panel
3. Right Side Panel
4. Left Side Panel
5. Back Panel
6. Wood Screws

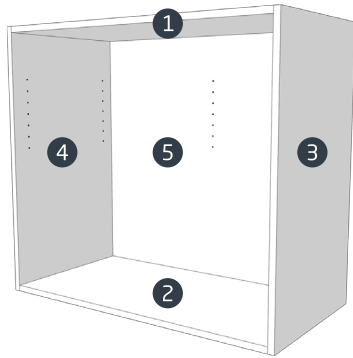

## Step 2:

The first part you will be working with is the **Top Panel** and one **Side Panel**.

Glue along the edge of your **Top Panel**




## Step 3:

Lift your **Side** and **Top Panel** up to meet together, then screw the two panels using the **Wood Screws**.



## Step 4:

Repeat the process with your remaining **Side Panel**.

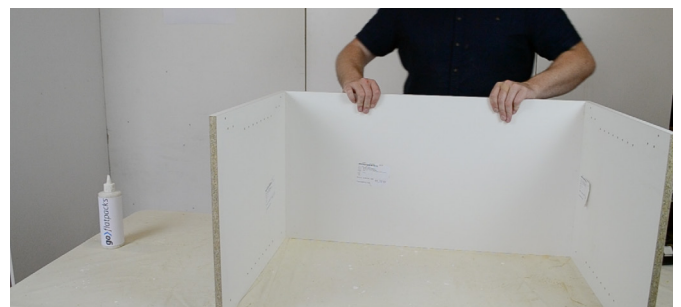

## Step 5:

On your **Bottom Panel**, glue along the edges, put into position and ensure edges are flush before affixing the panel to the **Side Panels** with **Wood Screws**.



## Step 6:

Flip your cabinet carcass so that the edge stripping is facing down, and the bare back of the cabinet carcass is facing upwards. Place some glue along the edges.



## Step 7:

Your **Back Panel** may have a small marking like this towards one edge. This indicates the edge that is to line up with your **Bottom Panel**.



## Step 8:

Place your **Back Panel** on your cabinet carcass, ensuring it is square and then proceed to affix with screws. Screwing down one edge, followed by the adjacent edge to square the cabinet.



## Step 9:

Congratulations! You have finished assembling your goFlatpacks Upper Cabinet.

